



WOOF-DEN


USER MANUAL




1. Lay out WOOF-DEN and peg out outer corners



2. Lay out poles and identify

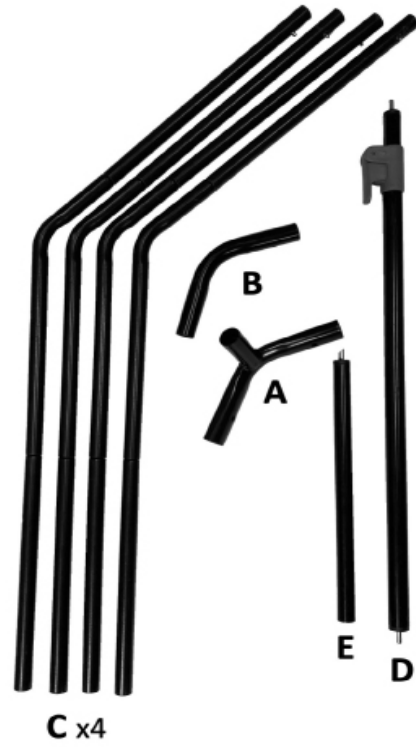


3. Assemble body poles x 2

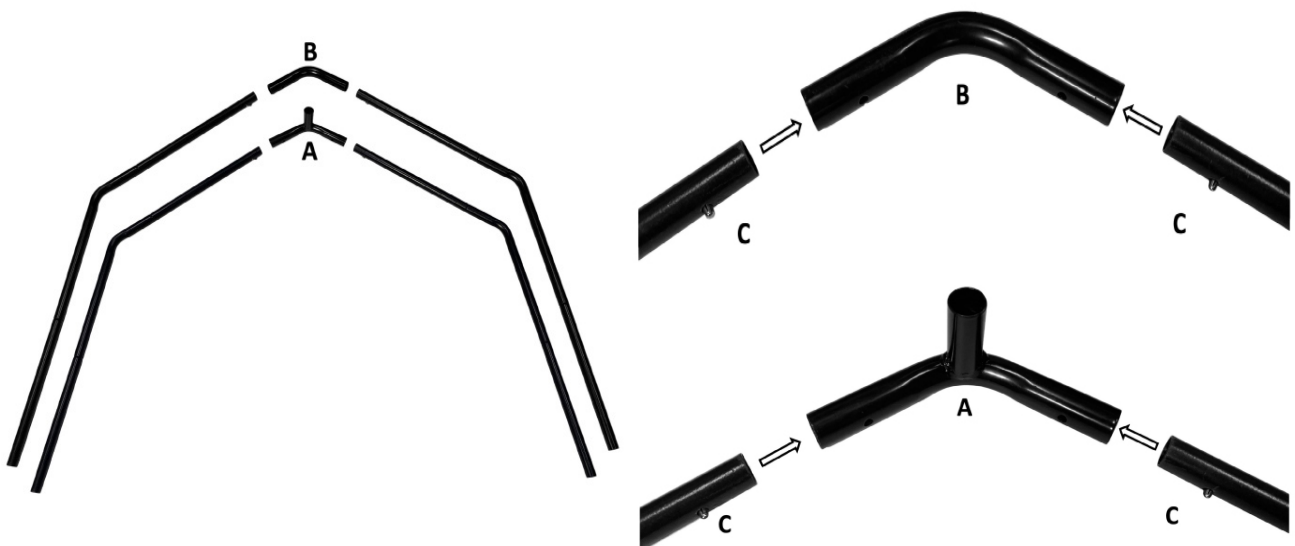

4. Identify front of swag (canopy end). Insert Pole A over pin & rings and attach top 2 clips only.



5. Repeat for pole B rear of swag

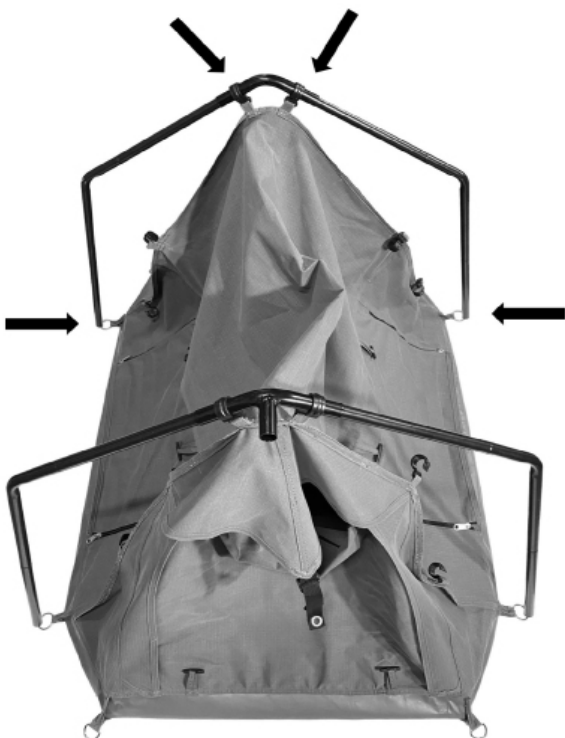

6. Insert ridgepole in holes provided on body poles and tighten using trigger lock. Attach remaining clips.



7. Insert ridgepole extender into pole A



8. Attach canopy strap to ridgepole extender and tension.

WARNING: Do not over tension as this will cause pole failure



9. Set up complete



PACK DOWN & ROLLING

Repeat previous steps in reverse to pack down WOOF-DEN

1. Lay WOOF-DEN flat and fold in half



2. Place poles in pole bag, position on edge of fold.



3. Roll WOOF-DEN



4. When fully rolled, WOOF-DEN should fit comfortably in carry bag.





23ZERO AUSTRALIA
www.23zero.com.au
32B Eileen Rd Clayton South, VIC 3169
sales@23zero.com.au